 


NEXT DOCK – FIRMWARE UPDATE INSTRUCTIONS


Please visit link below to get the PC software:

<https://next-accessories.com/NXNS2DK> OR <https://next-accessories.com/download>

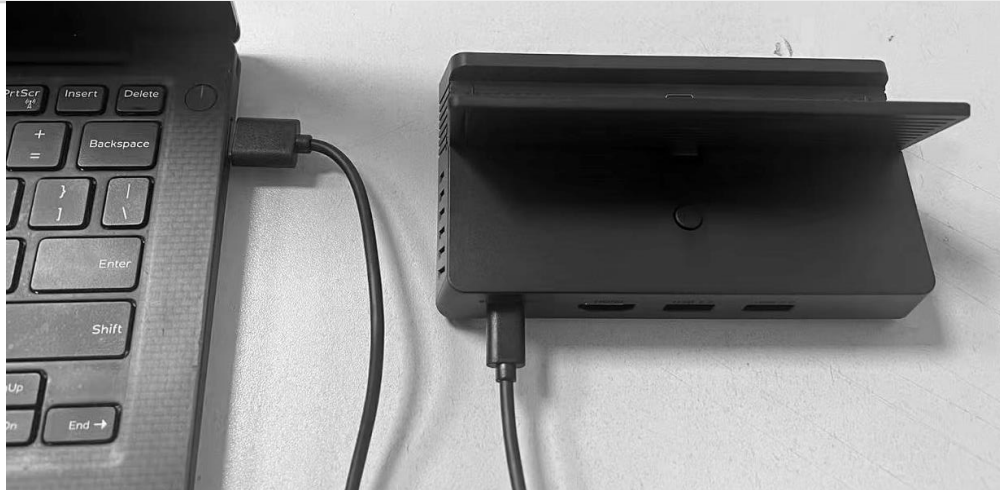

1. Connect your NEXT Dock to your PC using a USB cable




- Use a direct USB port on your computer (avoid USB hubs if possible).
- Do not disconnect your Nintendo Switch console during this process.

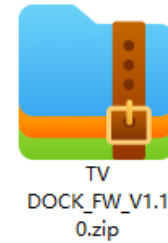

2. Locate the firmware update file in this folder and double-click the update file to run it.

- Follow any on-screen prompts. If a window pops up that says "Microsoft Defender SmartScreen prevented an unrecognized app from starting. Running this app might put your PC at risk.", click on "more info" and then "run anyway"
- The update process will take less than one minute.

NX-NS2DK UPDATE PROGRAM

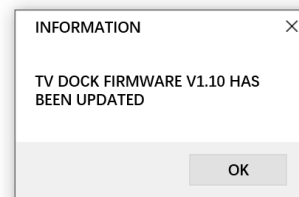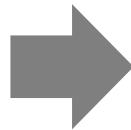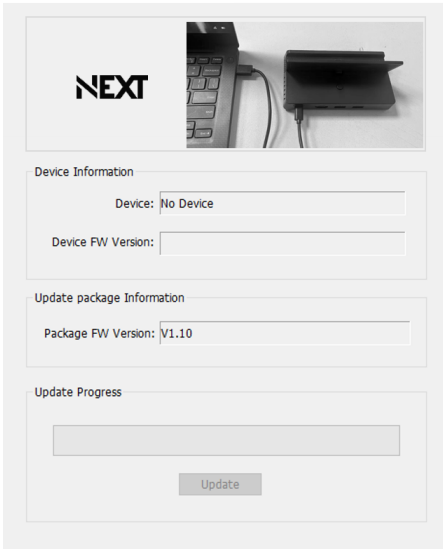

3. Wait until the update is complete.

- Do not disconnect the dock or turn off your computer during the update.

4. When finished, disconnect the dock and reconnect it to your Nintendo Switch 2.



-----Troubleshooting-----

- If the update file doesn't open, right-click it and select "Run as Administrator."
- If your computer doesn't recognize the dock, try a different USB port or cable.